

T.One + T.Foil





Important: Pre-press the garment 5 to 10 seconds and allow time for all moisture to evaporate! Any moisture left in the fabric will have a negative effect on the performance of the transfer process.

Place T.One Transfer printed for the use with the T.Foil on the garment and press for 5 seconds.


Note: On dark/black garment press less than 5 seconds to avoid backgrounding!

Strip liner right away hot on the heat press in one slow steady motion in a very shallow angle!

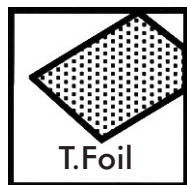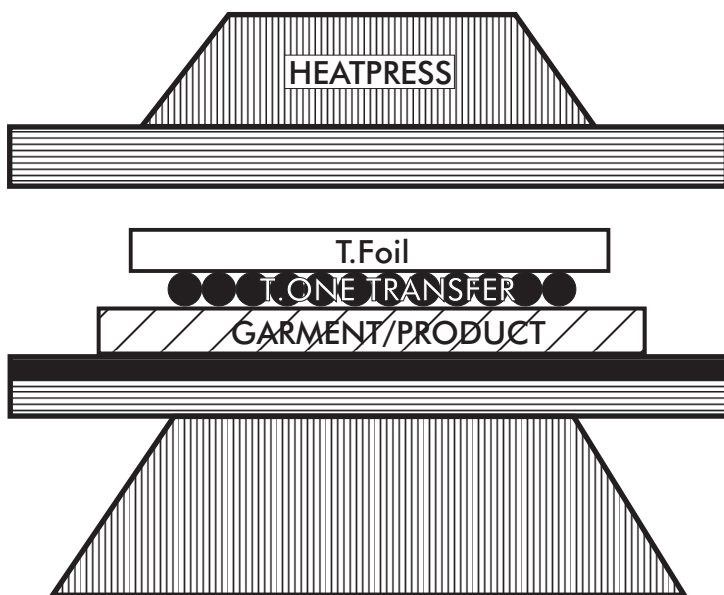


T.Foil


PRESS

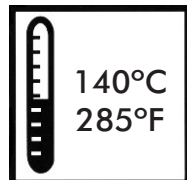

140°C
285°F

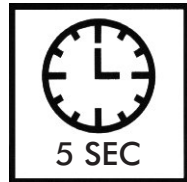


5 SEC

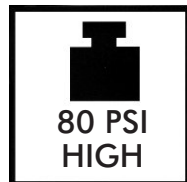

80 PSI
HIGH

STRIP

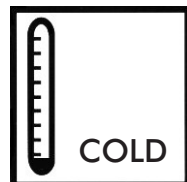

COLD

Important for Washing Durability of the garment: Cover the image with T.Seal and press again for 20 seconds for the final seal !

Note: First wash after minimum 48 hours only!